




Pentax Optio WP Motherboard and Flash Unit Replacement

Prerequisite guide for motherboard and flash unit removals

Written By: Derek

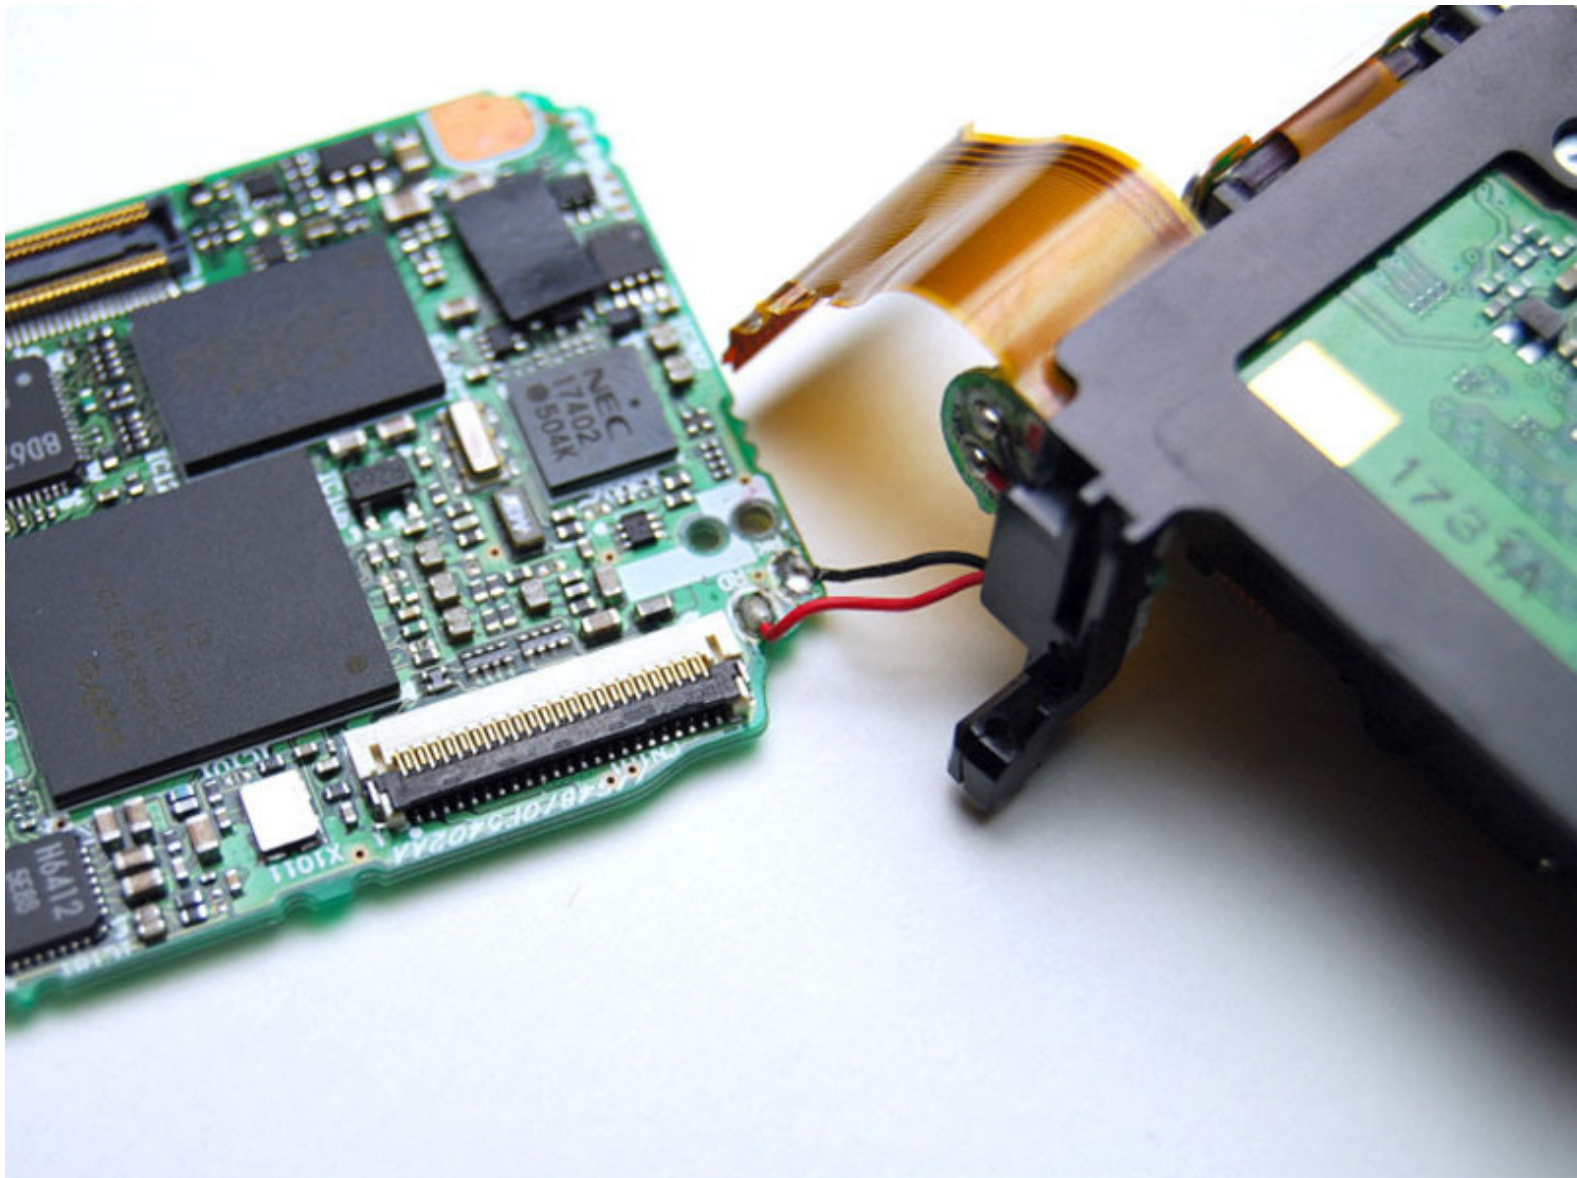

INTRODUCTION


PREREQUISITE GUIDE ONLY.



TOOLS:


- [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Motherboard and Flash Unit

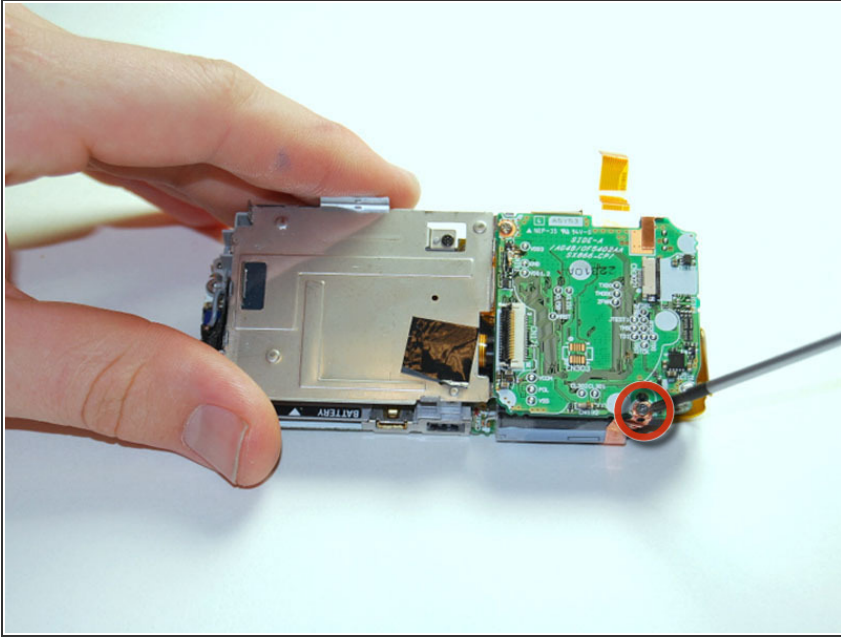


- Remove the 4 mm black screw on the bottom right corner of the motherboard.
- ⓘ The black screw may be hard to remove. Use the tweezers if necessary.

Step 2

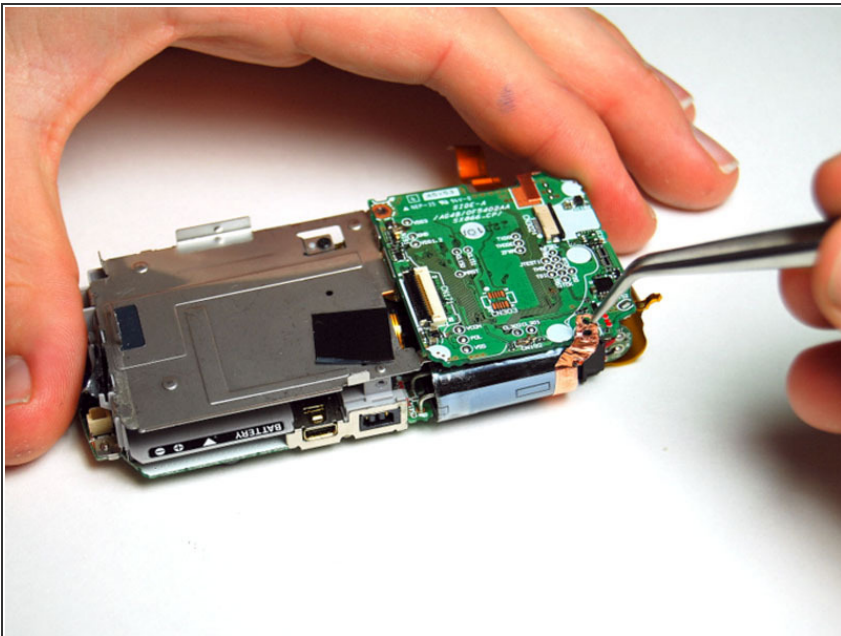



- With the tweezers, carefully peel back the copper ribbon that was underneath the black screw.

Step 3

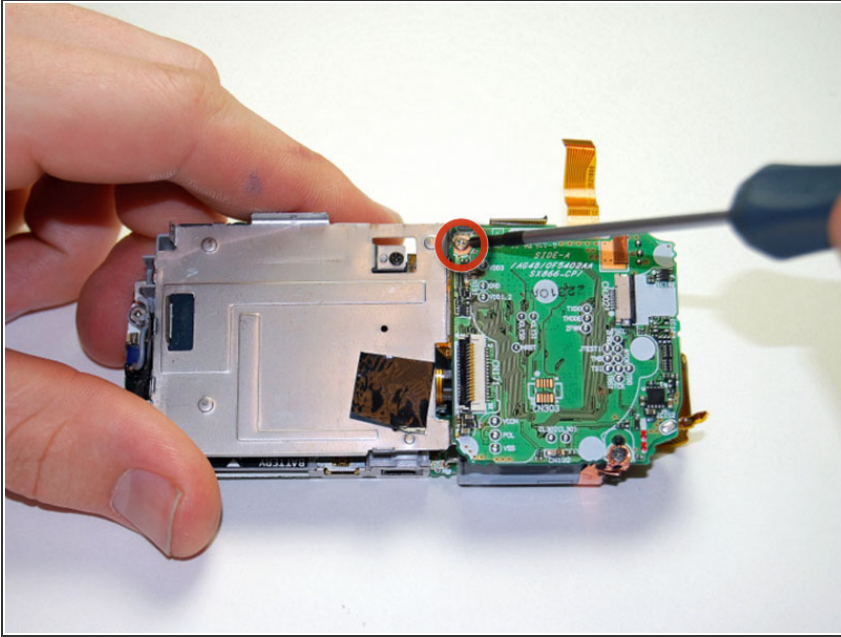

- Remove the 2.5 mm silver screw from the upper left corner of the motherboard.

Step 4

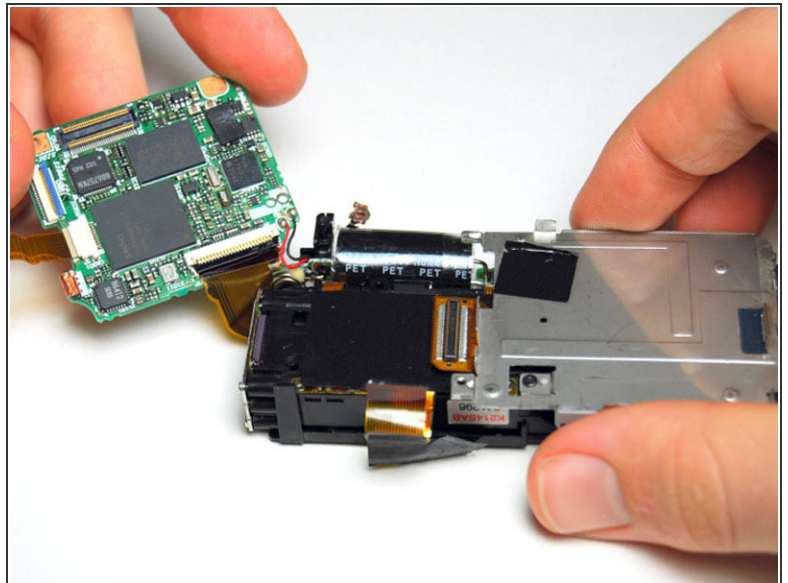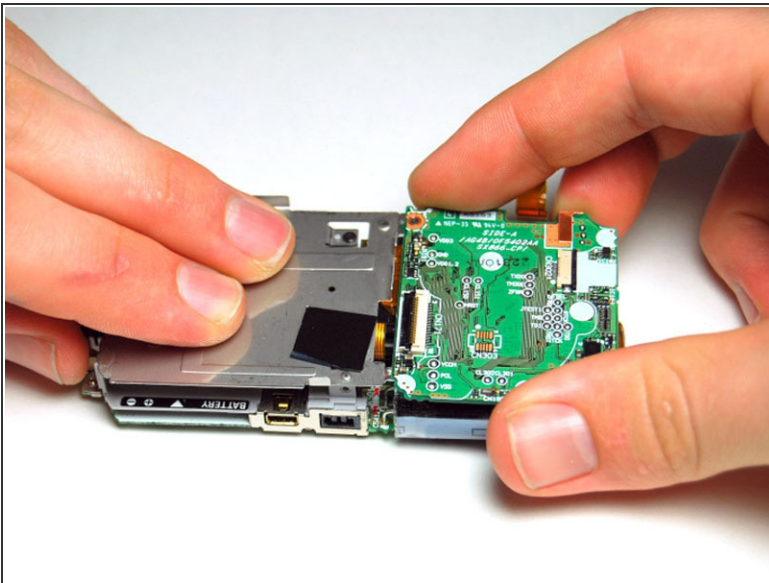

- Press down on the metal plate and gently lift the motherboard up from left to right.



Be cautious when lifting the motherboard since there is a copper ribbon and two wires attaching the motherboard to the flash unit.

- Reorient the camera so you are looking at the top edge with the metal plate on the right.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 06:32:59 AM.